



**Directions :**  
**Set Up and Take Down**

Thank you for purchasing the competitor's cart. To help, we have included some directions and helpful hints.

After removing the cart from the box, check how the bungee cords are wrapped. You will want to do the same for storage. The rubber bands on the end of each handle are for protection in shipping. You can remove those before use. If any handle tube is stuck tight do to shipping, please call us at 1-800-637-6754 and we will replace the cart.

**To unfold the cart:**

- **Unsecure the bungee cords and push the base of the cart down hard to lock it in place.**
- **You should feel it snap into place.** ( Diagram 1 )
- There are 2 locking positions-completely down and completely up. To raise the handle assembly push the black button in the middle support down and pull the handle up. It may seem to stop in mid position but it is not locked and is not recommended for transporting.
- The garment bag(s) is held in place by placing the hangers in the 2 Velcro straps on the handle and cinching them tight. (Diagram 2 ) The 2 straps can be joined in tandem to make one longer strap.
- The 2 bungee cords can be used in a variety of ways to hold the articles. You can cross the cords to the top or cross the cords and wrap around the back of the cart and secure them in the holes on the handle. ( Diagram 3 )
- When you are ready to hang the garments, simply remove the articles and pull the handle extensions out on each side. There are 2 aluminum button stops on each side. Turn the handles until you hear them snap into place. Distribute the garments by hanging them on both sides to distribute the weight.
- To leave, remove garments and put them back in the garment bag(s). Push in on the button stops and push the handle extensions in. Repeat the loading process for transporting.



Diagram 1



Diagram 2



Diagram 3

**To fold the cart:**

- Push on the locking mechanism button and push handles down slowly and completely. Pull base up and wrap the bungee cords around. It is best to wrap the cords starting toward the back over the top and around for a secure fit.